

New “easyTimer” Controls for Cleveland Convection Steamers

- Digital LED Readout with minutes and second for accurate cooking control
- Selector Dial with LED Light Ring for easy adjustable cooking time control
- SureCook Load Compensating feature standard
- Constant Steam Mode with 60-minute Standby Feature Standard
- Built - In Scale Indicator Timer, adjustable based on Water Conditions
- Standard on Steamcraft and Gemini model convection steamers.

Models

21CET8, 21CET16, 24CEA10, 24CGA20,
24CGA10.2, 24CGA10.2ES, 24CGP10, 24CDP10

- (Available June 2023)



EasyTimer Operating Instructions

1. Timed Mode (with “SureCook” load compensating feature)

- a. Select cooking time using “Control Knob”.
- b. Press “TIMER-START/STOP” button to start cooking.
- c. “SURE” COOK”” illuminates on digital display and steam production begins.
(Timer starts to countdown when compartment temperature reaches 192° F (90°C.).

2. Manual Mode (Continuous Steaming)

- a. Press and hold “TIMER-START STOP”” button for 5 seconds until switches to Manual mode.
- b. “MAN” will appear on the digital display when activated and control knob disabled.
- c. Note: steamer will go into “Standby” mode if compartment isn’t opened for 60 minutes.

3. Changing from Manual to Times Mode

- a. Press and hold “TIMER-START/STOP” button for 5 seconds until switches to TIMED mode.
- b. “TIMED” will appear on the digital display.
- c. Digital display will display 00:00, Control knob activated.

4. “Delime” Notification

- a. easyTimer comes with 400 hours operation for “Deliming Notification.”
- b. After 400 hours, “DELIME” appears on digital display for 5 seconds and will re-appear every 5 minutes.
- c. To clear “DELIME” notification and reset, press and hold “TIMER-START/STOP” button for 15-seconds.

5. Resetting Delime Notification

- a. Turn OFF main power with POWER SWITCH
- b. Press and hold the “TIMER-START/STOP” Button
- c. Power unit ON with main POWER SWITCH (with “TIMER START/STOP” Button pressed)
- d. Wait 20 seconds to enter Programming Mode (to change the Max number of hours)
- e. The Beeper starts beeping twice every second.
- f. Release the “TIMER-START/STOP” button.
- g. Display will show past settings.
- h. Turn knob to re-set number of hours.
- i. Press TIMER-START/STOP” button to save number of hours.