

INSTALLATION INSTRUCTION
STEAMCRAFT POWER 10
BOILER WATER INLET CONVERSION KIT
PART No. FK109219REVD-N

REBUILT DRAIN MANIFOLD ASSEMBLY

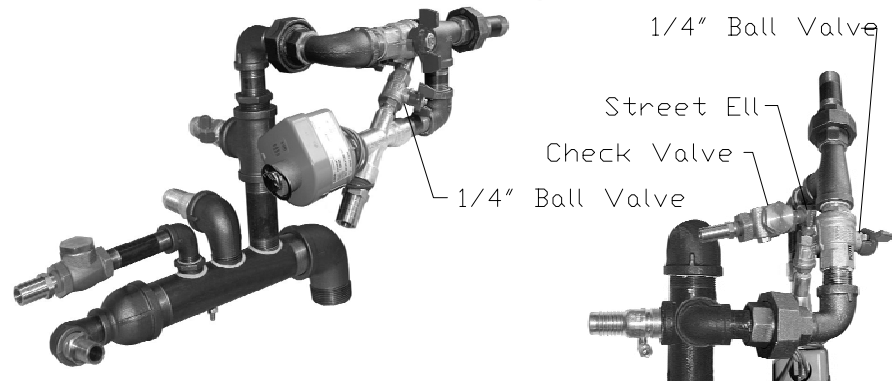


Figure 3

- 8 > Connect the 1/2" white water hose to the hose barb on the check valve installed in step 7. The hose may require cutting to allow fitting without kinking.
- 9 > Assemble the two hose barbs removed in step 4 with the 1/4" coupling supplied in the kit. Use this assembly to connect together the two hoses disconnected in step 3. Excess hose length must be cut off to prevent kinking. Route hose away from sharp edges. See Figure 4 on page 4.
- 10 > Tighten all hose clamps, do not over tighten.
- 11 > Continue with the reassembly of the unit.
- 12 > The new valve shield assembly mounts on the same manifold stud that the original shield mounted on. See Figure 5 on page 4.

PARTS LIST

- | | | | |
|-----|-----------------------------|------------|------------|
| 1 > | Nipple, close, 1/4", brass | P/N 14304 | Quantity 1 |
| 2 > | Coupling, full, 1/4", brass | P/N 03673 | Quantity 1 |
| 3 > | Valve shield assembly | P/N 109490 | Quantity 1 |