




RETROFIT INSTRUCTIONS FOR THERMOSTAT # SK2474800

Instructions are for SEL and SGL "T4" style skillets. The following steps will help you replace the old analogue thermostat with the newer solid state unit.

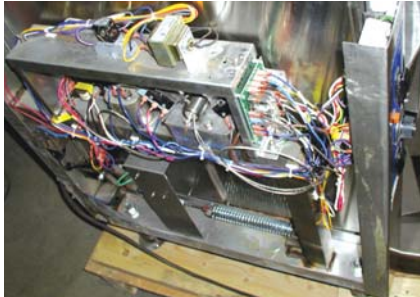

1. Disconnect power from unit.
2. Remove side panels.
3. Pull off temperature control knob and remove shaft seal from thermostat shaft.



9. Place a bead of silicone around edge of thermostat.
10. Insert thermostat through the newly cut hole.




4. Remove old thermostat.
5. Mark out a square 2-5/8 inches. This square must be centered on the thermostat shaft hole.



11. Lock thermostat in place with plastic mounting bracket supplied with thermostat.
12. Remove tape covering switches.

6. Check that the hole is the correct size by holding thermostat up to the square you marked out.

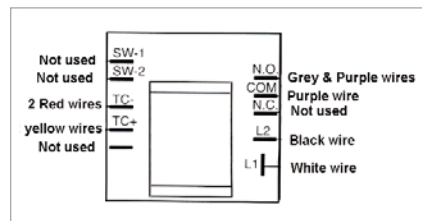

13. The connections on the old thermostat are labeled exactly the same as on the new thermostat. Move wires over one at a time.

7. Before you begin cutting, wrap tape around switches to prevent metal particles from shorting out switch.



8. Cut out square.



14. Replace panels, reconnect power supply and test unit.